
UNLICENSED AIRFIELD NO SUPPORT								
AIRFIELD NAME AND ICAO		September 25 COAL ASTON EGCA			EG38 plnG)	North		
CALLSIGN (A/C RADIO)		Coal Aston				Unicom 122.800	<u> </u>	
LOCATION		Lat N053.1	8.28	.000 Long W001.25.		25.83.000	Elev. 750ft	
LOCATION GEOGRAPHIC		4nm N of Chesterfield, Derbyshire; 6nm S of Sheffield						
CHART SOURCE		PlanG/CIX					QFE= QNH-25 HPscls	
METAR AIRPORT		EGCN 134.950		OVERHEAD joins are RECOMMENDED				
NAV AIDS (FSX /		VOR TNT - 033R @ 17nm;						
PLANG3)		VOR MCT - 100R @30nm; VOR POL - 141R @ 35nm						
RUNWAYS	Headings	Dimension		Surface	urface Noise Abatement			
	11 / 29	600m x 20m		GRASS	BOTH RUNWAYS; 20 ⁰ North after T/O			
AIRSPACE		CLASS G	G Transition level 3000ft Airspace above is Class C Lon FIR				-L195	
CIRCUITS HEIGHT / DIR.		1000ft QFE CIRCUITS TO THE NORTH: 11 LH, 2				9 RH. <mark>NOTE RESTRIC</mark>	<mark>TIONS</mark> .	
NO FLY AREAS		Sheffield city below 2700ft QNH, other marked areas below 2000ft QFE						
LOCAL HAZARDS		Popular VFR route avoiding Low Level Controlled Airspace.						
		KEEP A SHARP LOOKOUT, LISTEN and announce intentions						
HELICOPTER		Fly as fixed wing, unless advised. caution downwash passing parked A/C.						
OPERATIONS		Park 3 rotor diameters from runway and well clear of other A/C						
SPECIAL RULES		A/C on the ground have priority, due no taxiways. Check space to park						
		BEFORE landing.						

REMARKS The airfield does not stand out. Pilots are advised to use the navigation information below.



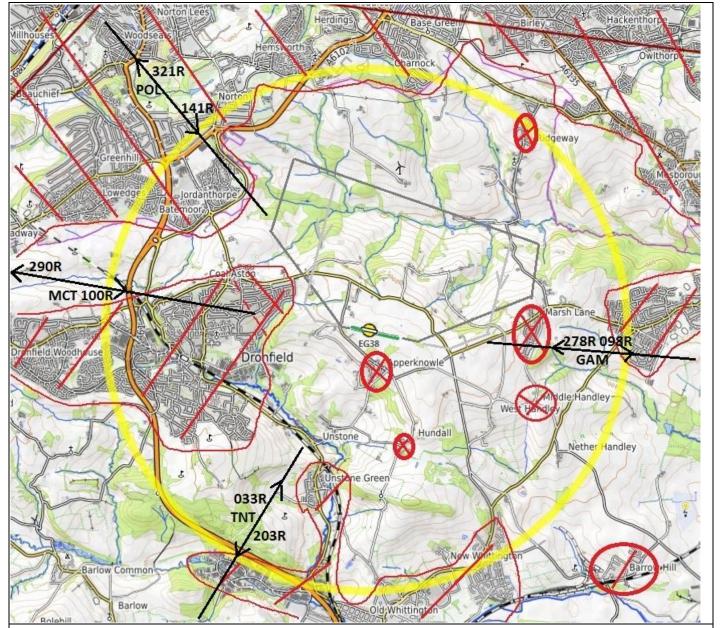

Coal Aston ATZ Restrictions

- 1. Sheffield City.[\\\] DO NOT CROSS BELOW A3000ft OUTBOUND; 2700ft QFE INBOUND.
- 2. 'OUTER' Built up areas [///] DO NOT CROSS BELOW 2000ft QFE; A2800ft.
- 3. Local Villages (within ATZ). [X X]DO NOT CROSS below 2000ft QFE
- 4. ←----→ Radials to/from local VORs
- 5. Recommended circuit in grey.

This A/F is unlicensed; PPR required, RW, BEFORE departure. An advanced booking system is used. BEFORE Descending from the Overhead, into the Circuit, LOOK, MAKE sure there is not a backtracking A/C.

CALL your intentions/position BEFORE commencing them, A/C on the runway, at this stip, HAVE RIGHT OF WAY, due to restricted space and need for ALL A/C to backtrack half the runway.

ALSO you need to make sure there is room for you to park, clear of the runway ONLY NEAR THE HANGERS. If not divert to Gameston.

Finally, This A/F will not be on ES (no controlling position, so until we can use å 'safetycom' frequency on VATSIM (supposedly in hand), Monitor UNICOM and if å group flight, use the 'SAFETYCOM' room

PILOTS: PLEASE PUT YOUR A/C CALLSIGN AFTER YOUR NAME. NOT TO BE USED FOR REAL WORLD OPERATIONS